## .com Irrigationglobal

## HydroBloom 8mm

### Installation Instructions

### **Option I: Single dripline with branches**

- Place the dripline (2) according to your garden layout.
- Connect the dripline to the valve (A) with 8×1/2" insert adaptor (1).
- For branches from the dripline, use an insert tee (3).
- For acute bending, use an insert elbow (4).
- When connecting two dripline sections, use an insert coupling (5).
- Turn on the valve (A) and flush the driplines.
- Fold and secure the dripline ends with rings (6).

### Legend:

- A\* Existing 1/2'' valve
  - I. 1/2" Insert adaptor
  - 2. HydroBloom 8 mm dripline
  - 3. Insert tee
  - 4. Insert elbow
  - 5. Insert coupling
  - 6. Line end, 16 mm ring

### \* Not included in the kit



#### ① I/2" Insert adaptor



③ Insert tee




4 Insert elbow



⑤ Insert coupling



' 🔞 Line end, 16 mm ring

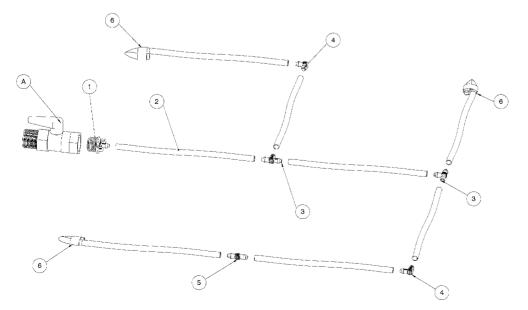

### Maintenance:

- Max. operating pressure: 2.0 bar
- Open the dripline ends and flush them regularly.

### www.irrigationglobal.com

# .com. Irrigationglobal

### HydroBloom 8mm

### Installation Instructions

### Option 2: Several 8 mm driplines branched from a 16 mm submain tube:

- Connect the submain (D) to the filter (B) with 16x3/4" adaptor (C).
- Place the driplines according to your garden layout.
- Punch holes in the submain for the driplines. Use the 3.7 mm mini punch inserter.
- Connect the driplines (2) to the submain (D) with an insert coupling (5).
- Connect the two opposite driplines to the submain with an insert tee (3).
- For acute bending, use an insert elbow (4).
- Flush the driplines, fold and secure their ends with rings (6).

### Legend:

### A\* 3/4'' valve

- B\* 3/4" filter
- C\* | 6x3/4" adaptor
- D\* 16 mm tube (submain)
- \* E\* Line end, I 6 mm clamp
  - 2. HydroBloom 8 mm dripline
  - 3. Insert tee
  - 4. Insert elbow
  - 5. Insert coupling
  - 6. Line end, 16 mm ring



③ Insert tee




(4) Insert elbow



(5) Insert coupling



\* 6 Line end, 16 mm ring

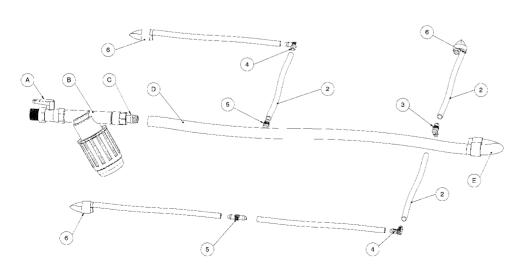

\* Not included in the kit

### Maintenance:

- Max. operating pressure: 2.0 bar
- Open the dripline ends and flush them regularly.

### www.irrigationglobal.com